# N3 说明书 正面折页



#### **Home Security Camera**

 
#### Features:













HD video and image no matter Day/Night

### A. Packaging Details

After opening the package, please make sure the camera is in good condition, confirm below accessories are complete or not.



N3(bracket including) x1



Accessories package x1



3meter USB Cable x1



Quick start guide x1

5V Power adapter x1

### **Home Security Camera**

#### **B.** Appearance Description

Press the reset button, reset it to factory default setting.

Support SD card local storage (Max 128G, Format FAT32).

Please format the sd card before insert it.

Support two way audio and voice prompt.

#### Power adapter

12V-1A. Speaker



#### **Home Security Camera**

#### **C.Installation**


#### 1.Install the bracket

Fix the plastic wall plug on the installing place, put the bracket on then tighten it up with screws, finish the bracket

#### 2.install the camera

Put the camera onto the fixed bracket , as shown in figure below. You can loose the screw of the adjustable part of bracket, then adjust it until you find the viewing angle you want, then finally make it fixed.

Notice: If install outdoors and choose to connect with net cable, please remember to set the waterproof accessories on the cable port before using.

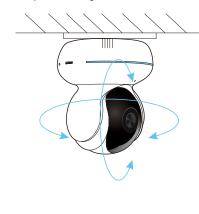

## **Home Security Camera**

#### **D.Download the APP**

Scan the QR code or search FINDCAM Max APP in APP Store or Google Play.








# Home Security Camera

## F: Wifi configuration.

1.Run APP, click" (+++)" to add new device.



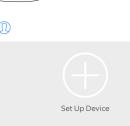


? How to Set UP Camera







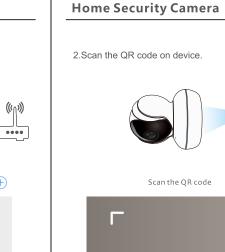

Scan the QR code on your device

HELP ME FIND MY CODE

# N3 说明书 背面折页

