



IPeGA

N-S Batman Wireless Gamepad

 
User Manual(PG-SW1018)

Product Application:

- This product is suitable for operating games on N-S/P3/Android and computer (win7 or above systems).
- All function buttons correspond to N-S pro gamepad button function, and support for TURBO.
- This product support for six axis function, bring better game experience for player.
- Ergonomic structure, feels comfortable.

* Due to the official game platform software upgrades or source code changes and other real factors caused some of the game can not be played or connected with our Gamepad, Ipega company has no responsibility. Ipega reserve the right of final interpretation for this.

Instruction button function

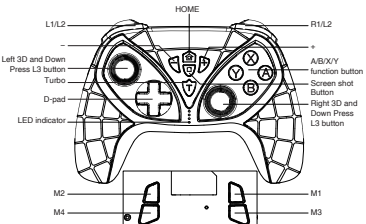


Electrical Parameters:

- Working voltage: DC3.7V;
- Working current: <30mA;
- Static current: <20uA;
- Continuous gameplay time: >15H;
- Charging current: DC5V;
- Charging time: About 3H;
- BT3.0, Transmission distance: <6KM;
- Battery capacity: 400mAh;
- Standby time: up to 30days after fully charged.

Product User Manual:

N-S Mode:

 - First connection to console: Turn on N-S console and open the Homepage, click the page as follows: Controllers—Change grip / order, enter to console pairing mode via pressing L + R on the controller.
- When gamepad turn off, press B+HOME for 2 seconds to enter the pairing mode. LED2 light start to flash rapidly when single or several LEDs are always on/Console will assign automatically, gamepad and console paired successfully, then press A button to start operation.
- After first connected: Press HOME button for 2 seconds to turn on gamepad, gamepad and console will connect automatically, then press A button to start operation.

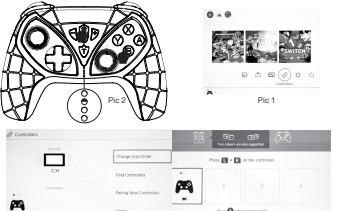

Android Device Connection

(Android standard HID mode Remark: Android mode, No vibration function, no six axis function)

When gamepad turn off, press Y+HOME button for 2 seconds to enter Android standard pairing mode, LED1 light flash quickly. Search search device name "PG-SW1018" on Android phone/Android tablet/Android smart TV and choose connection, after connected successfully, LED1 light is always on, already connected success before, press HOME button directly, LED flash slowly to display automatic reconnection.



 
PC device wired connection:

- When gamepad turn off, press L1+HOME button for 2 seconds to turn on, LED1 light flash quickly, connect gamepad to PC device via USB cable. It default as P3 wired mode, gamepad LED2 light is always on.
- Hold the HOME button for 3 seconds to switch to PC Xbox360 mode, LED1 light is always on.
- Remark: wired connect mode support vibration function, no six axis function.



P3 console connection:

- When gamepad turn off, hold the combination button A+HOME for 2 seconds to start up, LED indicator will be flashing.
- Connect gamepad to P3 console via USB cable then press HOME button for pairing.
- After pairing successfully, corresponding LED light will be always on and enter the P3 operation mode.
- Remove USB cable to switch to wireless connection.



Operation use mode

	Android system	N - S console
Pairing mode (press for 3 seconds)	Android wired mode	N - S wireless mode
Indicator light	Y+HOME	B+HOME
Remark	LED1	Console automatic assigned
Remark	No support vibration six axis	support vibration six axis

	P3 console	PC computer
Pairing mode (press for 3 seconds)	P3 wireless mode	P3 wired mode
Indicator light	A+HOME	A+HOME
Indicator light	Console automatic assigned	PC P3 mode: LED2 PC 360 mode: LED3
Remark	To enter searching status under wireless mode, insert USB cable, after connected successfully, remove USB cable, the gamepad will enter wireless connection	Support vibration, no support six axis function

TURBO function turn on/turn off:

- Action button include(A/B/X/Y/L2/R2/R), all can set TURBO function by manually.
- Setting mode: Hold any action button and then press TURBO button all at the same time to start up TURBO function, repeat the operation, TURBO function is cleaned.
- When connection is out of the TURBO function is cleaned automatically, if need to turn on TURBO function must to reset.

Gamepad charging/sleep/wake up/turn off function:

- Charging when gamepad is off, LED1+LED4 indicator flash quickly at the same time, the light will be off after fully charged.
- Charging when device is connecting, LED indicator light flash, LED is always on after fully charged.
- Sleep/wake up function: if no operation within 5 minutes, the gamepad will enter sleep mode, if to re operate, need to press HOME button to wake up and recover.
- The corresponding light will flash quickly to indicate lower battery.

Programming function:

- Four programming buttons are on the back of gamepad button, support for action button or function mapping or programming be setting as per each customs.
- Programming function can realize any of action button or combination button(A single programming button can reach up to the setting of 12 button combinations)
- Setting programming button: first press programming button(for example M1), at the same time press +, indicator light 1#, 4# and 2#, 3# Flash alternate then release the button, enter setting mode.
- At this time press one or more button to copy (A/B/X/Y/L1/R1/R2/L3/R3/Up/down/left/right).
- Press programming button again, then finish setting, LED light return to status before setting.
- Clear programming function: press programming button(M1) and + at the same time, indicator light 1#, 4# and 2#, 3# Flash alternate then release the button, press the appointed programming button again can clear programming function.
- Programming function include save function when turn off, support to save programming function when sleep mode or turn off mode.
- Four programming buttons original setting is: A/B/X/Y

Notes:

- Do not store product in humid or high temperature places;
- Do not knock, beat, puncture, or try to disassemble to avoid unnecessary damage to the product;
- Do not throw away with garbage because product has built-in battery;
- Non-professional disassemble this product by mistake otherwise it will not be cover by the after-sales warranty service;
- Our company is not responsible for the failure of some games to connect with this product due to irresistible factors such as software upgrade or source code change of the official game platform. Our company reserves the right of final explanation.

Accessories List



IPeGA

蜘蛛侠无线手柄N-S版

产品说明书(PG-SW1016)中文版

产品适用范围:

 
- 本产品适合操作N-S/P3安卓及电脑(Win7以上系统)设备上的游戏;
- 本手柄的功能按键一一对应N-S pro手柄的功能键,并且支持TURBO连打功能;
- 本产品支持无线充电,使玩家在更好的游戏体验;
- 结构符合人体工程学,手感舒适;

*因官方游戏平台软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作,我公司不承担任何责任,对此我公司保留最终解释权。

技术支持QQ群: 837350687
客服电话: 0755-2791 8998
在线时间: 周一至周五9:30-17:30



功能按键图示

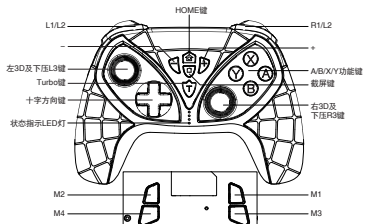


产品特性参数:

- 工作电压: DC3.7V;
- 工作电流: <30mA;
- 静态电流: <20uA;
- 持续游戏时间: >15H;
- 充电电压: DC5V;
- 充电时间: 约3小时;
- 无线3.0, 传输距离: <6KM;
- 电池容量: 400mAh;
- 待机时间: 满电放置30天;

产品使用说明:

N - S主机连接:

 - 首次连接手柄到主机: 打开N - S主机, 在N - S主机主界面, 用手触摸地点: 手柄—更改设置/顺序, 进入主机配对模式界面;
- 在手柄关机状态下, 按B+HOME组合键2秒开启手柄并进入配对模式, 手柄上的LED2开始快速连续闪烁, 当单个或多个LED亮时(主机自动配对), 手柄与主机配对成功, 然后按A操作;
- 已成功连接: 通过长按HOME键2秒开启手柄, 手柄与主机自动连接, 然后按A键进行操作。

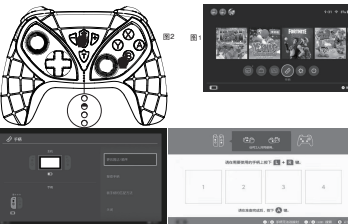

安卓设备连接

(安卓标准HID模式, 备注: 安卓模式下, 无震动功能, 无六轴功能)

在手柄关机状态下, 同时按Y+HOME键2秒进入安卓标准配对模式, 手柄LED1灯快闪, 当安卓手机蓝牙搜索列表出现名为"PG-SW1018"设备时, 选择连接, 连接成功, 手柄LED1灯常亮, 已成功连接, 可以连接至HOME键, LED1灯闪, 自由使用, 推荐下载游戏平台: 手机游戏说明看首二条码关注及关注微信公众号, 按提示下载并安装游戏平台(看首游戏页), 进入平台下载所需要的游戏。



有线连接PC设备:

- 在手柄关机状态下, 长按L1+HOME组合键2秒开机, 手柄LED4灯闪, 用USB数据线将手柄连接到PC设备, 此时为PC和P3有线模式, 手柄LED2灯亮;
- 通过长按HOME键3秒可切换PC Xbox360模式, 此时手柄LED3灯亮;
- 备注: 有线连接的模式下, 支持震动功能, 无六轴功能。



P3主机连接:

- 在手柄关机状态下, 长按A+HOME组合键2秒开机, 手柄4个LED指示灯同时使用;
- 用一条USB数据线将手柄与P3主机连接, 手柄A+HOME键配对;
- 配对成功, 手柄所有LED灯长亮, 手柄A+HOME键闪;
- 拔掉USB线, 手柄进入无线连接。



操作使用模式:

	安卓系统	N - S主机
模式配对(长按3秒)	安卓无线模式	N - S无线模式
指示灯	Y+HOME	B+HOME
备注	LED1	主机自动分配
备注	不支持震动, 六轴	支持震动, 六轴

	P3主机	PC电脑
模式配对(长按3秒)	P3无线模式	PC有线模式
指示灯	A+HOME	A+HOME
备注	无线模式下进入搜索状态时需插USB数据线, 连接成功时拔除USB线, 手柄进入无线连接	PC P3模式: LED2 PC 360模式: LED3
备注	支持震动, 六轴	支持震动, 不支持六轴

TURBO功能开启/关闭:

- 动作键包括(A/B/X/Y/L2/R2/R) 6个按键, 均可手动设置TURBO功能;
- 设置方法: 长按动作键, 同时再按TURBO键, TURBO功能开启, 长按动作键, 同时再按TURBO键, TURBO功能关闭;
- 产品断开连接后, 之前设置TURBO功能自动清除, 若启用TURBO功能时, 必须重新设置。

手柄充电/休眠/唤醒/关机功能:

- 手柄充电/休眠/唤醒功能
- 关机状态下充电孔LED1+LED4指示灯同时闪烁, 充满唤醒;
- 充电指示灯: 手柄在充电时LED指示灯闪烁, 充满常亮;
- 睡眠/唤醒功能: 手柄在不使用时会自动进入休眠状态, 当需要使用时需按HOME键唤醒即可回连;
- 电量不足提示: 对应的指示灯闪烁提醒。

编程功能:

- 四个编程键在手柄底部, 可以实现自己预设的动作键功能映射的操作;
- 编程功能可实现对中的任意一个动作按键, 或组合键进行(单个编程键最多可实现12个组合键);
- 设置编程键: 首先按编程键(如M1), 同时再按下+, 指示灯1#, 4#和2#, 3#交替闪烁后松开按键, 进入设置模式;
- 此时按下需要复制的一个或多个常规功能键(A/B/X/Y/L1/L2/R1/R2/L3/R3/上下/左右);
- 再次按下编程键退出, 即完成设置, LED彩灯即回到设置前的显示状态;
- 清除编程键功能: 同时按编程键(如M1)和+, 指示灯1#, 4#和2#, 3#交替闪烁后松开按键, 再次按下编程键, 即清除编程键功能;
- 编程功能具有关机保存功能, 手柄休眠、关机后重新开机都能保存已编程功能;
- 四个编程键初始设置为: A/B/X/Y

注意事项:

- 请不要把本产品存放在潮湿或高温地方存储;
- 不要随意摔打、刺穿、或试图去拆解本产品, 以免对产品造成不必要的损害;
- 产品由电池供电, 请勿将本产品与充电器一起丢弃;
- 非专业人员拆卸本产品, 否则不在售后服务保修范围内;
- 因官方平台升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作, 我公司不承担任何责任, 对此我公司保留最终解释权。

产品清单



IPeGA 品牌属于 IPEGA LIMITED 所有

专利号: ZL201930704896.5