


Неуправляемый коммутатор

5/8/16/24 портов

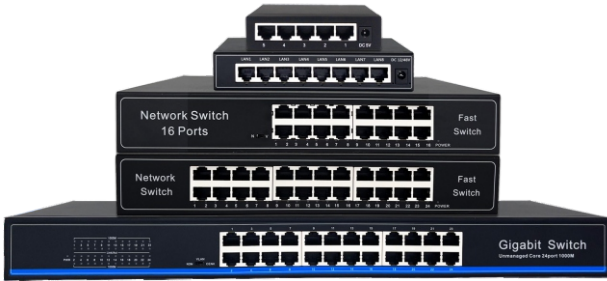

Описание продукта



Пожалуйста, внимательно прочтите эту инструкцию перед использованием!

1: Общая информация


Коммутаторы этой серии являются неуправляемыми с 5/8/16/24 портами 100 или 1000 Мб/с. Современный дизайн, легкий вес, простота в использовании, отсутствие настроек, технология Plug and Play. Высокоскоростная передача пакетов данных решает проблему сложных ограничений по кабелю и экономит затраты. Чтобы добиться максимальной скорости потока, коммутатор должен использоваться в сочетании с сетевым кабелем не менее CAT-5e. Пропускная способность передачи данных до 150 метров. Соответствует стандарту IEEE802.3 IEEE802.3u IEEE802.3ab IEEE802.3z IEEE802.3z IEEE802.1q IEEE802.3Aaz IEEE802.ad Протокол Ethernet.

2: Параметры


Имя	Fast Ethernet	Gigabit Ethernet
Скорость портов	5/8/16/24 10/100 Мб/с адаптивных портов RJ45	5/8/16/24 10/100/1000 Мб/с адаптивных портов RJ45
Пропускная способность	1/1.6/3.2/4.8 Гб	10/16/32/48 Гб
Стандарты	IEEE802.3 IEEE802.3u IEEE802.3ab IEEE802.3z IEEE802.3z IEEE802.1q IEEE802.3Aaz IEEE802.ad	
Температура хранения	-20°C---70°C, влажность 5-90%, без конденсата	
Рабочая температура	0°C---50°C, влажность 10-90%, без конденсата	

3: Описание

8 портов

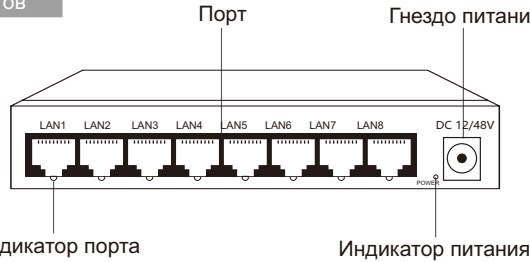


24 порта

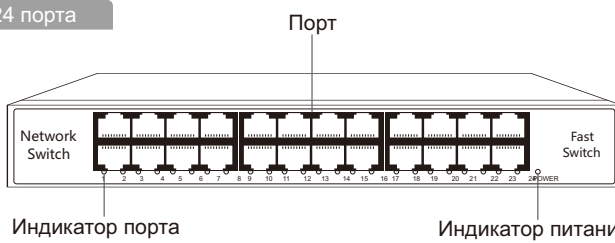

Цвет индикатора	Состояние	Описание
Индикатор питания	Горит	Ист. питания в норме
	Не горит	Нет питания
Индикатор порта	Горит	Порт подключен
	Мигает	Передача данных
	Не горит	Порт не подключен

4: Способ подключения

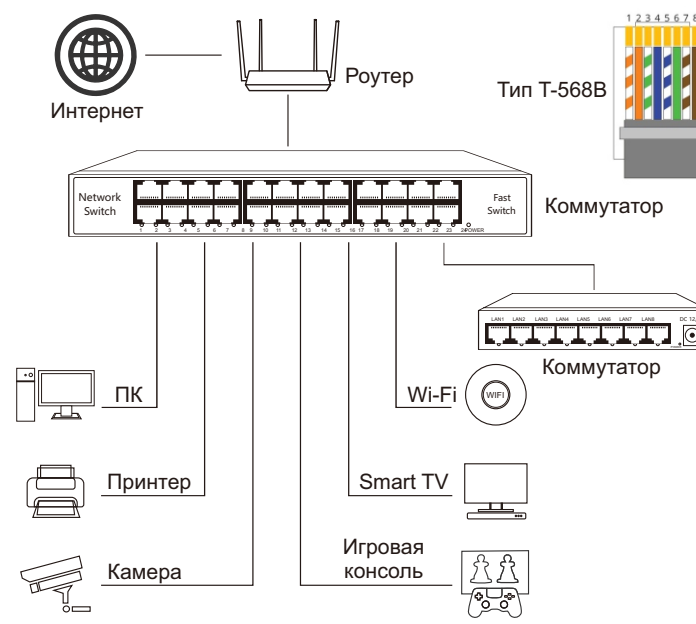

5: Руководство по установке

Выполните приведенные ниже действия, чтобы установить коммутатор:

1. Установите коммутатор на устойчивую платформу
2. Вставьте шнур питания переменного или постоянного тока в интерфейс питания
3. Подключите сетевое устройство к соответствующему порту коммутатора с помощью сетевого кабеля.

Меры предосторожности при использовании:

1. Не ставьте на коммутатор тяжелые предметы и убедитесь, что он имеет хорошую вентиляцию и условия для отвода тепла.
2. Не перезапускайте коммутатор часто, чтобы избежать повреждения.

После каждого выключения лучше всего подождать 10 секунд перед перезапуском.

После включения питания коммутатор автоматически инициализируется и светодиодные индикаторы будут отображаться следующим образом:

1. Все индикаторы портов включаются, а затем выключаются, указывая на успешный сброс системы.
2. Светодиодный индикатор питания всегда горит.

Примечание: Если инициализация не соответствует описанному выше, пожалуйста, проверьте источник питания!


Технические характеристики изделия и информация, упомянутые в данной инструкции, приведены только для справки. Производитель оставляет за собой право изменять дизайн и технические характеристики продукта. В случае внесения каких-либо изменений без предварительного уведомления преимущественную силу имеет физический объект.

Ethernet switch

5/8/16/24 Ports



Product description

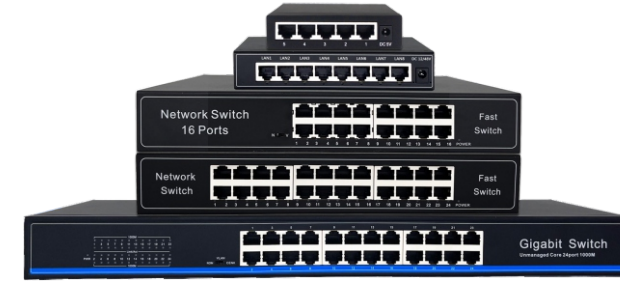

Thank you for choosing our products. Our products have been serving the security industry for more than 10 years. Ethernet switch series products have won certain praise in the market.

Please read this instruction carefully before use:

1: Product introduction

This series of switches are 5/8/16/24-port 100 or 1000Mbps unmanaged Ethernet switches, providing 5/8/16/24 100 or 1000Mbps adaptive ports. Highly integrated design, lightweight, simple, no configuration, plug and play, strong compatibility, no burning of equipment, high-speed transmission, flexible data packet loss, solves the problem of complicated cable restrictions, and saves costs. It is suitable for financial, government, hotel, shopping mall, campus, hospital and enterprise use.

※To ensure smooth data flow, our company's Ethernet switch must be used in conjunction with CAT-5e network cable.

※The data transmission capacity is 80---150 meters.


※Comply with IEEE802.3 IEEE802.3u IEEE802.3ab IEEE802.3z IEEE802.1q IEEE802.3Aaz IEEE802.ad Ethernet protocol.

2: Product parameters


product name	Fast Ethernet switch	Gigabit Ethernet Switch
port transfer rate	5/8/16/24 10/100Mbps auto-adaptive RJ45 ports	5/8/16/24 10/100/1000Mbps auto-adaptive RJ45 ports
Backplane bandwidth	1G/1.6G/3.2G/4.8G	10G/16G/32G/48G
Protocol/Standard	IEEE802.3 IEEE802.3u IEEE802.3ab IEEE802.3z IEEE802.1q IEEE802.ad IEEE802.3Aaz IEEE802.3z	
Storage Temperature	-20°C---70°C Storage Humidity 5%--90% non-condensing	
Service Temperature	Operating Temperature: 0°C---50°C Humidity 10%--90% non-condensing	

2: Product Description

8-port Ethernet switch

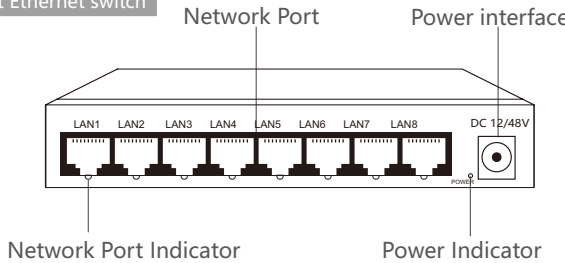


24-port Ethernet switch

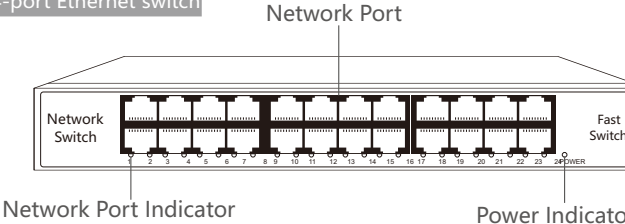

Indicator light	state	explain
Power Indicator	Changliang	Switch power supply is normal
	Not bright	No power on or abnormal power on
Function Indicator	Changliang	Port connected
	twinkle	Data transmission in progress
	Not bright	The port is not connected or the connection is abnormal

3: Product Specification Application Topology

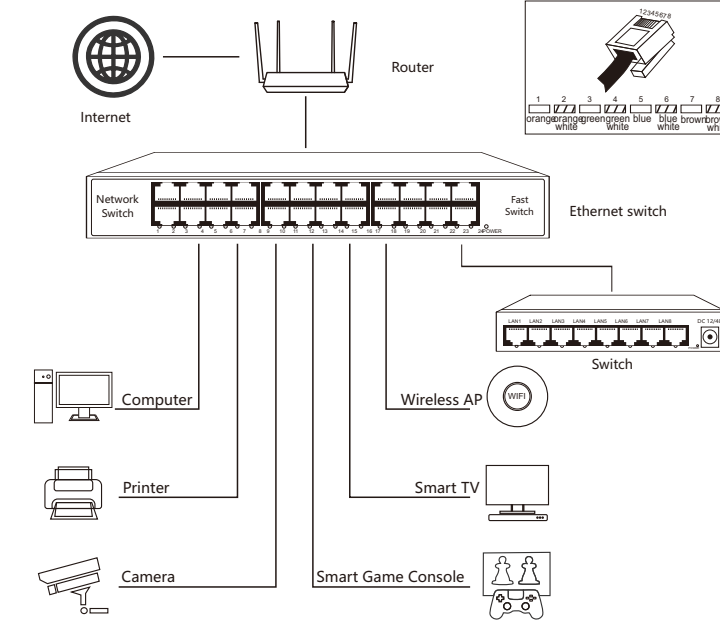

4: Installation Guide

Follow the steps below to install the switch:

1. Place the switch on a stable platform;
2. Insert the AC or DC power cord into the power interface;
3. Connect the network device to the corresponding port of the switch through the network cable.

Precautions for use:

- ◆Do not place heavy objects on the switch and ensure that the switch has a good ventilation and heat dissipation environment.
- ◆Do not start the host frequently to avoid damage. After each shutdown, it is best to wait 10 seconds before restarting.

Rack Mount:

1. Install the two L-shaped brackets in the accessories separately and then install them on the switch panel (the accessories provide screws);
2. Place the switch in the rack;
3. Use a Phillips screwdriver to secure the switch.

After power on, the switch will automatically initialize, and the LED indicators will appear as follows:

1. All port indicators are all on and then off, indicating that the system is reset successfully.
2. The power LED indicator is always on.

Note: If the initialization does not match the above, please check the power supply.

The product specifications and information mentioned in this instruction are for reference only. The company reserves the right to change the product design and specifications. If there is any change without notice, the physical object shall prevail.